

## **CHAMFERA system variable**

1365 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2441

### **Function Description:**

The **CHAMFERA** system variable is used to set the first chamfer distance when CHAMMODE has set to be 0.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/chamfera-system-variable-1365.html>