

## **CHAMFERB system variable**

1366 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2299

### **Function Description:**

The **CHAMFERB** system variable is used to set the first chamfer distance when CHAMMODE has set to be 0.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/chamferb-system-variable-1366.html>