

CHAMFERD system variable

1368 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2428

Function Description:

The **CHAMFERD** system variable is used to set the first chamfer distance when CHAMMODE has set to be 1.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/chamferd-system-variable-1368.html>