

CHAMMODE system variable

1369 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2186

Function Description:

The **CHAMMODE** system variable is used to set the entry methods for CHAMFER.

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : need two chamfer distances

1 : need one chafer distance and one angle

Online URL: <https://www.gstarcad.com.my/knowledge/article/chammode-system-variable-1369.html>