

## **CIRCLERAD system variable**

1370 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2472

### **Function Description:**

The **CIRCLERAD** system variable is used to set default circle radius.

**Type** : Real

**Saved in** : Not saved

**Initial value** : 0.0000

Zero means no default radius.

Online URL: <https://www.gstarcad.com.my/knowledge/article/circlerad-system-variable-1370.html>