

## **CLAYER system variable**

1371 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2774

### **Function Description:**

The **CLAYER** system variable is used to set current layer.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : 0

Online URL: <https://www.gstarcad.com.my/knowledge/article/clayer-system-variable-1371.html>