

## **CLISTATE system variable**

1373 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2632

### **Function Description:**

The **CLISTATE** system variable is used to specify the command line to be turned on or off.  
(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : turn off

**1** : turn on

Online URL: <https://www.gstarcad.com.my/knowledge/article/clistate-system-variable-1373.html>