

CLISTATE system variable

1373 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2617

Function Description:

The **CLISTATE** system variable is used to specify the command line to be turned on or off.
(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : turn off

1 : turn on

Online URL: <https://www.gstarcad.com.my/knowledge/article/clistate-system-variable-1373.html>