

## **CMATERIAL system variable**

1374 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2450

### **Function Description:**

The **CMATERIAL** system variable is used to set material for new objects.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : BYLAYER

The valid value could be **BYLAYER**, **BYBLOCK**, and material names in drawing.

Online URL: <https://www.gstarcad.com.my/knowledge/article/cmateral-system-variable-1374.html>