

CMDECHO system variable

1377 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2408

Function Description:

The **CMDECHO** system variable is used to control whether to echo prompts and entry when running AutoLISP command functions.

Type : Integer

Saved in : Not saved

Initial value : 1

Range : 0,1

System Variable Value:

0 : turn echo off

1 : turn echo on

Online URL: <https://www.gstarcad.com.my/knowledge/article/cmdecho-system-variable-1377.html>