

## **CMDNAMES system variable**

1379 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2541

Function Description:

The **CMDNAMES** system variable is used to display the names of active command and transparency commands.

(Read-Only)

**Type** : String

**Saved in** : Not saved

**Initial value** : ""

Online URL: <https://www.gstarcad.com.my/knowledge/article/cmdnames-system-variable-1379.html>