

CMLEADERSTYLE system variable

1380 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2662

Function Description:

The **CMLEADERSTYLE** system variable is used to set the name of current mleader style.

Type : Strings

Saved in : Drawing

Initial value : Standard

Online URL: <https://www.gstarcad.com.my/knowledge/article/cmleaderstyle-system-variable-1380.html>