

## **CMLEADERSTYLE system variable**

1380 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2681

### **Function Description:**

The **CMLEADERSTYLE** system variable is used to set the name of current mleader style.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Standard

Online URL: <https://www.gstarcad.com.my/knowledge/article/cmleaderstyle-system-variable-1380.html>