

CMLJUST system variable

1381 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2471

Function Description:

The **CMLJUST** system variable is used to specify alignment for multiple line.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : top

1 : zero(middle)

2 : bottom

Online URL: <https://www.gstarcad.com.my/knowledge/article/cmljust-system-variable-1381.html>