

## **CMLSCALE system variable**

1382 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2581

### **Function Description:**

The **CMLSCALE** system variable is used to control global line weight for multiple line.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1.0000(Imperial) or 20.0000 (Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/cmlscale-system-variable-1382.html>