

CMLSCALE system variable

1382 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2595

Function Description:

The **CMLSCALE** system variable is used to control global line weight for multiple line.

Type : Integer

Saved in : Drawing

Initial value : 1.0000(Imperial) or 20.0000 (Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/cmlscale-system-variable-1382.html>