

COMPASS system variable

1386 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2324

Function Description:

The **COMPASS** system variable is used to control whether the compass to be on or off.

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : turn off

1 : turn on

Online URL: <https://www.gstarcad.com.my/knowledge/article/compass-system-variable-1386.html>