

COPYMODE system variable

1388 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2434

Function Description:

The **COPYMODE** system variable is used to control whether to repeat COPY command automatically.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : set to repeat COPY command automatically

1 : set to create a single copy by COPY command

Online URL: <https://www.gstarcad.com.my/knowledge/article/copymode-system-variable-1388.html>