

## **CROSSINGAREACOLOR system variable**

1391 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2230

### **Function Description:**

The **CROSSINGAREACOLOR** system variable is used to control the color of selected area when executing window selection.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 100

**Range** : 1 ~ 255

The valid number is from 1 to 255. The **SELECTIONAREA** system variable must be on.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/crossingareacolor-system-variable-1391.html>