

CROSSINGAREACOLOR system variable

1391 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2213

Function Description:

The **CROSSINGAREACOLOR** system variable is used to control the color of selected area when executing window selection.

Type : Integer

Saved in : Registry

Initial value : 100

Range : 1 ~ 255

The valid number is from 1 to 255. The **SELECTIONAREA** system variable must be on.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/crossingareacolor-system-variable-1391.html>