

## **CTAB system variable**

1392 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2901

### **Function Description:**

The **CTAB** system variable is used to control to display model tab or specified layout tab in drawing area.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Model

The **CTAB** system variable is usually used in customized programs.

Online URL: <https://www.gstarcad.com.my/knowledge/article/ctab-system-variable-1392.html>