

## **CURSORSIZE system variable**

1394 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2613

### **Function Description:**

The **CURSORSIZE** system variable is used to determine the cursor size by degrees of screen.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 5

**Range** : 1% ~100%

The valid range is from 1% to 100%. When setting to 100%, the cursor displays in full screen, users could not see the endpoint of cursor. When setting to smaller than 100%, moving the cursor to the edge of screen, users could see the endpoint of cursor.

Online URL: <https://www.gstarcad.com.my/knowledge/article/cursorsize-system-variable-1394.html>