CVPORT system variable

1395 GstarCAD MY /KW July 9, 2021 System Variables 0 2493 Function Description:

The CVPORT system variable is used to change identification code in current viewport.

Type : Integer **Saved in** : Drawing **Initial value** : 2

System Variable Value:

Users could change current viewport by setting the CVPORT system variable, first they should meet the following conditions:

- 1. The specified identification code should be one active viewport code.
- 2. The cursor has not been locked and it could move to viewport when executing a command.
- **3**. The Tablet mode has turned off.

Online URL: https://www.gstarcad.com.my/knowledge/article/cvport-system-variable-1395.html