

## **DATE system variable**

1398 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2410

### **Function Description:**

The **DATE** system variable is used to store current date and time in specified format.  
(Read-Only)

**Type** : Real

**Saved in** : Not saved

**Initial value** : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/date-system-variable-1398.html>