

DBCSTATE system variable

1399 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2246

Function Description:

The **DBCSTATE** system variable is used to indicate whether the database is connected to manager or not.

(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : close

1 : open

Online URL: <https://www.gstarcad.com.my/knowledge/article/dbcstate-system-variable-1399.html>