

## **DGNFRAME system variable**

1408 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1079

### **Function Description:**

The **DGNFRAME** system variable is used to determine whether the frame of DGN reference underlay is visible or need to plot in current drawing.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

### **System Variable Value:**

**0** : do not display or plot the frame of DGN reference underlay.

It will temporarily redisplay the frame when selected or previewed the selection set.

**1**: display and plot the frame of DGN reference underlay

**2** : display but do not plot the frame of DGN reference underlay

Online URL: <https://www.gstarcad.com.my/knowledge/article/dgnframe-system-variable-1408.html>