

DGNFRAME system variable

1408 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1081

Function Description:

The **DGNFRAME** system variable is used to determine whether the frame of DGN reference underlay is visible or need to plot in current drawing.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : do not display or plot the frame of DGN reference underlay.

It will temporarily redisplay the frame when selected or previewed the selection set.

1: display and plot the frame of DGN reference underlay

2 : display but do not plot the frame of DGN reference underlay

Online URL: <https://www.gstarcad.com.my/knowledge/article/dgnframe-system-variable-1408.html>