

## **DGNIMPORTMAX system variable**

1409 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 879

### **Function Description:**

The **DGNIMPORTMAX** system variable is used to set the maximum number of converting elements when importing a DGN file.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 10000000

### **System Variable Value:**

**0** : turn off the limit

**>0** : set the limit for the number of elements

Online URL: <https://www.gstarcad.com.my/knowledge/article/dgnimportmax-system-variable-1409.html>