

# DGNMAPPINGPATH system variable

1410 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1008

## Function Description:

The **DGNMAPPINGPATH** system variable is used to set the dgnsetups.ini file location for storing DGN mapping settings.

(Read-Only)

**Type** : Strings

**Saved in** : Registry

**Initial value** : Unknown

Online URL:

<https://www.gstarcad.com.my/knowledge/article/dgnmappingpath-system-variable-1410.html>