

## **DGNOSNAP system variable**

1411 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1171

### **Function Description:**

The **DGNOSNAP** system variable is used to determine whether to active object snap mode for geometric drawings that attached DGN reference underlay.

**Type** : Integer

**Saved** : in Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : turn off object snap mode for geometric drawings that attached DGN reference underlay

**1** : turn on object snap mode for geometric drawings that attached DGN reference underlay

Online URL: <https://www.gstarcad.com.my/knowledge/article/dgnosnap-system-variable-1411.html>