

DIASTAT system variable

1412 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1100

Function Description:

The **DIASTAT** system variable is used to save the exiting way for currently used dialog box.
(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : cancel

1 : ok

Note: the DIASTAT system variable will not be applied on standard file selection dialog box (such as "Select file" and "Save as")

Online URL: <https://www.gstarcad.com.my/knowledge/article/diastat-system-variable-1412.html>