

## **DIMALT system variable**

1414 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 924

### **Function Description:**

The **DIMALT** system variable is used to control the display of alternate units in dimensions.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Turn off

### **System Variable Value:**

**Off** : disable alternate units

**On** : enable alternate units

Online URL: <https://www.gstarcad.com.my/knowledge/article/dim-alt-system-variable-1414.html>