

DIMALT system variable

1414 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 919

Function Description:

The **DIMALT** system variable is used to control the display of alternate units in dimensions.

Type : Parameter

Saved in : Drawing

Initial value : Turn off

System Variable Value:

Off : disable alternate units

On : enable alternate units

Online URL: <https://www.gstarcad.com.my/knowledge/article/dim-alt-system-variable-1414.html>