

## **DIMALTD system variable**

1415 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 866

### **Function Description:**

The **DIMALTD** system variable is used to control the number of decimal places in alternate units.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 2 (Imperial)or 3 (Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimaltd-system-variable-1415.html>