

DIMALTTD system variable

1418 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 687

Function Description:

The **DIMALTTD** system variable is used to set the number of decimal places for tolerance in the alternate units of a dimension.

Type : Integer

Saved in : Drawing

Initial value : 2 (Imperial) or 3 (Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimaltttd-system-variable-1418.html>