

DIMALTTZ system variable

1419 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 968

Function Description:

The **DIMALTTZ** system variable is used to control zero suppression for tolerance.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0 ~ 15

System Variable Value:

0 : suppress zero feet and zero inch

1 : include zero feet and zero inch

2 : include zero feet and suppress zero inch

3 : include zero inch and suppress zero feet

To suppress leading or trailing zeros. Add the following values to one of the preceding values:

4 : suppress leading zero

8 : suppress trailing zero

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimalttz-system-variable-1419.html>