

## **DIMALTTZ system variable**

1419 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 987

### **Function Description:**

The **DIMALTTZ** system variable is used to control zero suppression for tolerance.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0 ~ 15

### **System Variable Value:**

**0** : suppress zero feet and zero inch

**1** : include zero feet and zero inch

**2** : include zero feet and suppress zero inch

**3** : include zero inch and suppress zero feet

To suppress leading or trailing zeros. Add the following values to one of the preceding values:

**4** : suppress leading zero

**8** : suppress trailing zero

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimalttz-system-variable-1419.html>