

# **DIMALTU system variable**

1420 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 827

## **Function Description:**

The **DIMALTU** system variable is used to set unit formats for alternate units of all dimension sub styles(except angular dimension).

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 2

**Range** : 1 ~ 8

## **System Variable Value:**

**1** : scientific

**2** : decimal

**3** : engineering

**4** : architectural(stacked)

**5** : grade (stacked)

**6** : architectural

**7** : fractional

**8** : Microsoft Windows desktop (decimal format using control panel settings for decimal separator and number grouping symbols)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimaltu-system-variable-1420.html>