

DIMALTU system variable

1420 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 823

Function Description:

The **DIMALTU** system variable is used to set unit formats for alternate units of all dimension sub styles(except angular dimension).

Type : Integer

Saved in : Drawing

Initial value : 2

Range : 1 ~ 8

System Variable Value:

1 : scientific

2 : decimal

3 : engineering

4 : architectural(stacked)

5 : grade (stacked)

6 : architectural

7 : fractional

8 : Microsoft Windows desktop (decimal format using control panel settings for decimal separator and number grouping symbols)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimaltu-system-variable-1420.html>