

## **DIMANNO system variable**

1422 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 623

### **Function Description:**

The **DIMANNO** system variable is used to specify whether the current dimension style is annotative style or not.

(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : nonannotative

**1** : annotative

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimanno-system-variable-1422.html>