

DIMANNO system variable

1422 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 622

Function Description:

The **DIMANNO** system variable is used to specify whether the current dimension style is annotative style or not.

(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : nonannotative

1 : annotative

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimanno-system-variable-1422.html>