

DIMAPOST system variable

1423 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 801

Function Description:

The **DIMAPOST** system variable is used to specify the text prefixes and suffixes of alternate units dimensions for all dimensions (except angular dimensions).

Type : Strings

Saved in : Drawing

Initial value : ""

Users could set the **DIMAPOST** system variable to be a Period "." to turn off a set prefix or suffix (or both).

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimapost-system-variable-1423.html>