

## **DIMAPOST system variable**

1423 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 804

### **Function Description:**

The **DIMAPOST** system variable is used to specify the text prefixes and suffixes of alternate units dimensions for all dimensions (except angular dimensions).

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

Users could set the **DIMAPOST** system variable to be a Period "." to turn off a set prefix or suffix (or both).

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimapost-system-variable-1423.html>