

DIMARCSYM system variable

1424 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 950

Function Description:

The **DIMARCSYM** system variable is used to control the display of arc symbol in arc length dimension.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : put the arc symbol in front of dimension text

1 : put the arc symbol above dimension text

2 : do not display arc symbol

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimarcSYM-system-variable-1424.html>