

DIMATFIT system variable

1427 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 918

Function Description:

The **DIMATFIT** system variable is used to control the text and arrows alignment method when the extension line space is not sufficient to place them.

Type : Integer

Saved in : Drawing

Initial value : 3

Range : 0,1,2,3

System Variable Value:

0 : place the text and arrows outside of extension line

1 : move arrow outside of extension line, and then move text

2 : move text outside of extension line, and then move arrow

4 : move either text or arrows, whichever fits best

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimatfit-system-variable-1427.html>