

## **DIMATFIT system variable**

1427 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 905

### **Function Description:**

The **DIMATFIT** system variable is used to control the text and arrows alignment method when the extension line space is not sufficient to place them.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 3

**Range** : 0,1,2,3

### **System Variable Value:**

**0** : place the text and arrows outside of extension line

**1** : move arrow outside of extension line, and then move text

**2** : move text outside of extension line, and then move arrow

**4** : move either text or arrows, whichever fits best

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimatfit-system-variable-1427.html>