

## **DIMAUNIT system variable**

1428 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 919

### **Function Description:**

The **DIMAUNIT** system variable is used to set unit format for angular dimension.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0 ~ 4

### **System Variable Value:**

**0** : decimal degrees

**1** : degrees/minutes /seconds

**2** : gradians

**4** : radians

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimaunit-system-variable-1428.html>