

DIMAUNIT system variable

1428 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 963

Function Description:

The **DIMAUNIT** system variable is used to set unit format for angular dimension.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0 ~ 4

System Variable Value:

0 : decimal degrees

1 : degrees/minutes /seconds

2 : gradians

4 : radians

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimaunit-system-variable-1428.html>