

DIMAZIN system variable

1429 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 750

Function Description:

The **DIMAZIN** system variable is used to control zero suppression for angular dimensions.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2,3

System Variable Value:

0 : display all leading zero and trailing zero

1 : suppress all leading zero in decimal dimensions

2 : suppress all leading zero in decimal dimensions

4 : suppress all leading zero and trailing zero

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimazin-system-variable-1429.html>