

## **DIMBLK system variable**

1430 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1100

### **Function Description:**

The **DIMBLK** system variable is used to set the display of arrow block on the end extension line.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

Users could enter a Period "." to restore default settings.

Note: the annotative block could not be used as customized arrow for dimensions and leaders.

### **System Variable Value:**

"" : closed filled

"\_DOT" : dot

"\_DOTSMALL" : dot small

"\_DOTBLAN" : dot blank

"\_ORIGIN" : origin indicator

"\_ORIGIN2" : origin indicator 2

"\_OPEN" : open

"\_OPEN90" : right angle

\_OPEN30" : open 30

"\_CLOSED" : closed

"\_SMALL" : dot small blank

"\_NONE" : none

"\_OBLIQUE" : oblique

"\_BOXFILLED" : box filled

"\_BOXLANK" : box

"\_CLOSEDBLANK" : closed blank

"\_DATUMFILLED" : datum triangle filled

"\_DATUMBLANK" : datum triangle

"\_INTEGRAL" : integral

"\_ARCHICK" : architectural tick

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimblk-system-variable-1430.html>